



# How to Install Front Luggage Rack for Sidecar

How to install the front luggage for a sidecar. P/N: 58214 - Chrome P/N: 58214.105 - Flat Black  
Made in Germany

Written By: David





## PARTS:


- [Luggage Rack for Sidecar Nose Flat Black \(made in Germany\) \(1\)](#)  
*58214.105*
  - [Luggage Rack for Sidecar Nose Chrome \(made in Germany\) \(1\)](#)  
*58214*
-

## Step 1 — How to Install Front Luggage Rack for Sidecar




- Remove side panel.
- Disconnect battery.

## Step 2

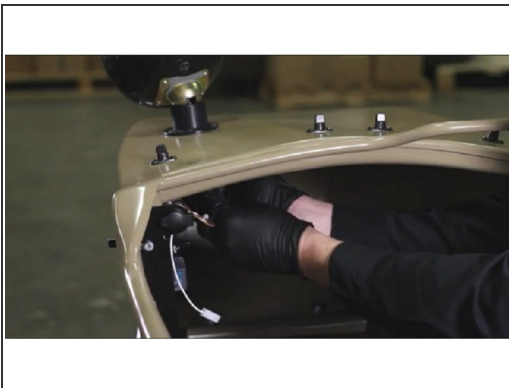

- If equipped with accessory spotlight, unplug spotlight from harness.
- Remove 19mm nut and spring washer.
- Remove spotlight from pedestal mount.

### Step 3

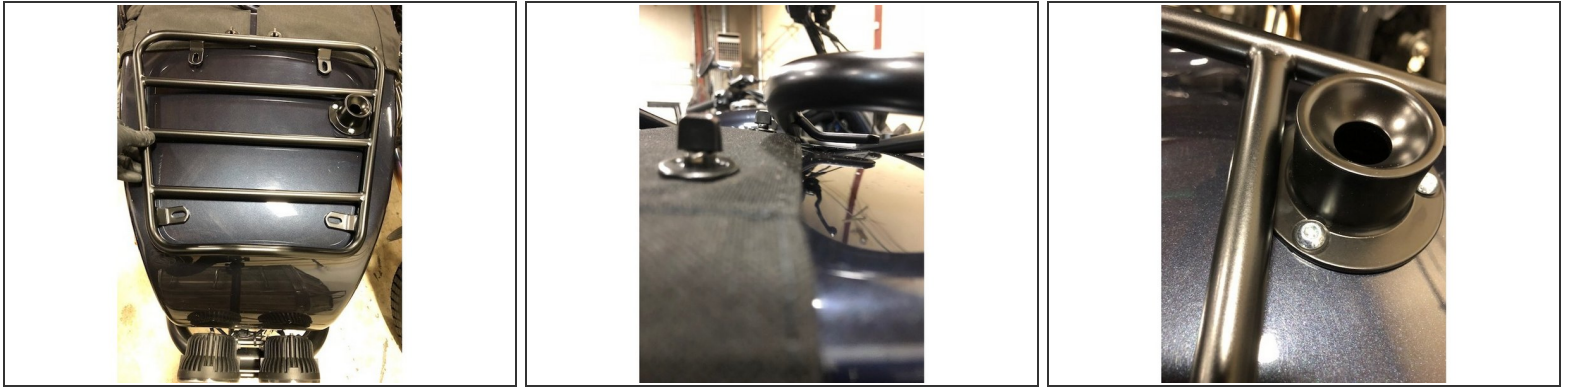


- Gently place luggage rack onto sidecar body.
- Check fitment of luggage rack in relation to the leading edge of the tonneau cover. Be sure fastening, unfastening and removed without obstruction is possible.
- If equipped, check for clearance around spotlight pedestal mount.
- ⓘ To preserve painted surfaces and protect from scratches or drilling debris harming the finish, consider covering the entire location in masking tape prior to marking hole locations for drilling.

### Step 4



- After front to back location has been determined, measure to center the rack side to side.
- Once rack location is determined, mark all four (4) hole locations.
- ⓘ Accurate measurements alone may not look symmetrical. In some cases, visually determining the final placement in addition to measuring will be necessary for an esthetically appealing final product. Be sure of placement and function of all surrounding accessories BEFORE drilling.

## Step 5

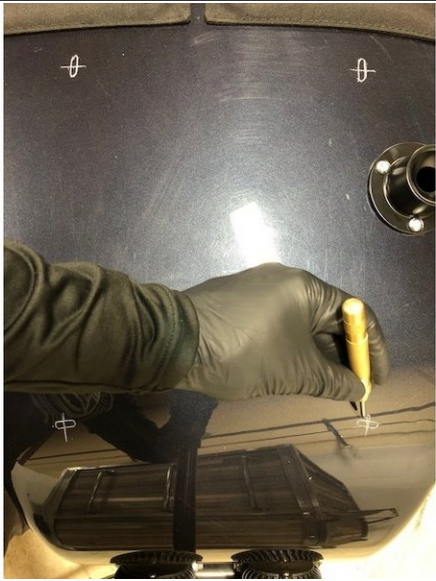

- Center punch marked locations.
- Drill clearance holes approximately 9/32" (9mm) in size.
- ⓘ Touch-up paint or clear nail polish can be applied to a newly drilled hole to prolong the inevitable formation of rust.

## Step 6



- Use the provided hardware with rubber isolation washers to mount the rack.
- Place rack on the top one set of steel and rubber washers.
- Install the provided four (4) 8mm bolts.

## Step 7



- Install the remaining rubber and steel washers and nylock nut.
- Tighten all hardware until the rubber washers compress and the rack is secure without moving.
- ⓘ Over tightening is not necessary. Tighten until the rack no longer moves yet the rubber washers are not fully compressed. Fully compressing the rubber washers will lead to premature cracking and deterioration.

## Step 8



- If equipped, reinstall the spotlight in reverse order of step 2.
- Reconnect the battery.
- Clean fingerprints and other debris from the finished surfaces.